



Material List

No.	Component	Material
1	Lifting eyebolt	ASTM A105
2	Hex nut	ASTM A105
3	Washer	ASTM A105
4	Hand wheel	ASTM A536
5	Operating nut	ASTM B62
6	Hex cap screw	ASTM A105
7	Hex nut	ASTM A105
8	Snap ring	AISI 066
9	Target carrier nut	ASTM B62
10	Target	ASTM B108
11	Hex cap screw	ASTM A105
12	Window glass	LEXAN-UN
13	Window glass gasket	PTFE
14	Hex cap screw	ASTM A105
15	Hex nut	ASTM A105
16	Body	ASTM A536
17	Stand pipe	ASTM A53
18	Stem	AISI 1045
19	Cotter pin	AISI 304
20	Crane coupling	ASTM A126B
21	Plug	AISI 304
22	Cover	ASTM A126B
23	Cross recessed countersunk head screw	AISI 304
24	Locking nose	ASTM 307 B

Ordering Information

Description	Part Number
Wall Post Indicator (Rasco)	7V00000071

- Optional Extra: **PIBV2** Switch

Field Adjustment:

1. Remove the top section from the top of the Indicator post assembly.
2. Set the "OPEN" and "SHUT" targets for the appropriate valve size.
3. Reattach the top section to the top of the indicator post assembly.
4. Design and dimensions are subject to change without notice.

